
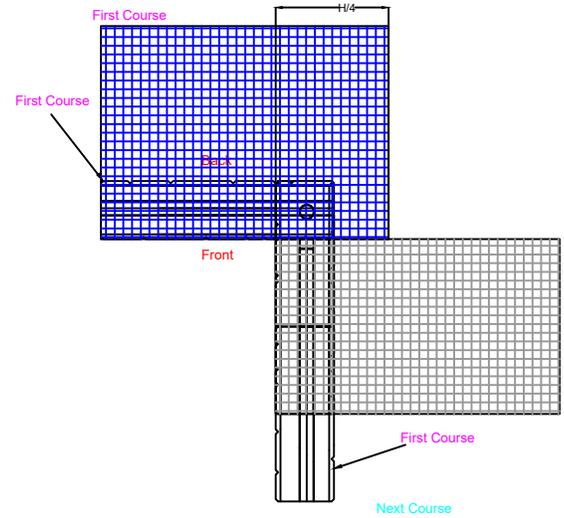
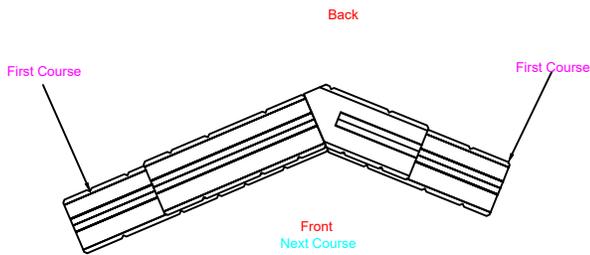
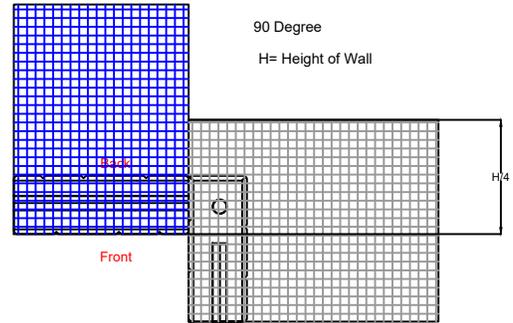


# DURA HOLD 2<sup>®</sup>

## GEOGRID PLACEMENT AT INSIDE CORNER

REF: Detail\_DuraHold2\_Inside Corner with Grid

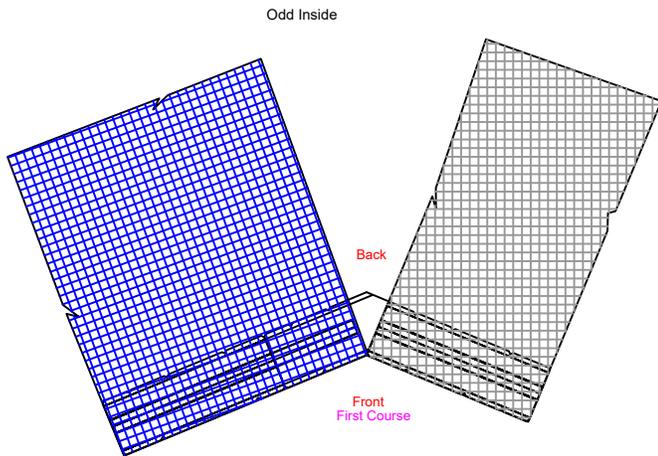

### Note:

1. Geogrid should be placed to avoid any overlapping between blocks.
2. Place additional reinforcement on next course of units to eliminate gaps left between reinforcement on specified placement elevation.
3. Corners greater than 90 degree are not recommended.



Engineering design by RisiStone Inc.

UNILOCK.COM | 1-800-UNILOCK

**UNILOCK<sup>®</sup>**  
PAVERS & WALLS