


OLDE QUARRYTM

REF: Detail_Olde Quarry_Seat Wall - Pillar Integration

SEAT WALL - PILLAR INTEGRATION

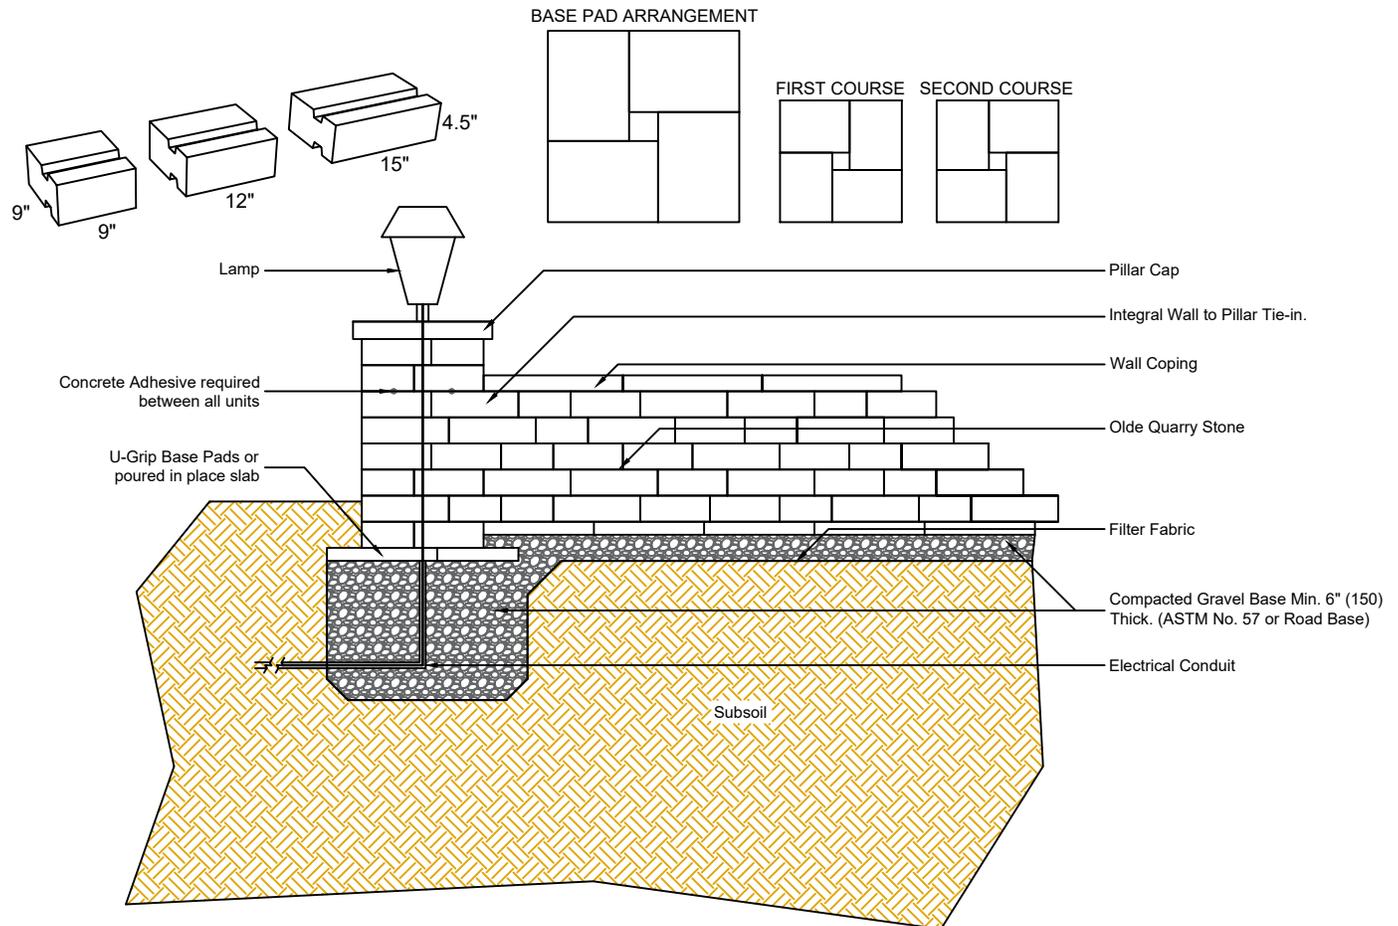

Notes:

1. Subsequent courses offset to create running bond pattern.
2. Each course must be glued with concrete adhesive (two 1/4" beads x 10" long/stone).

Consult a qualified professional engineer to determine site specific construction details.

Maximum height is typical and will vary from project to project depending on site conditions and load requirements. Geogrid placement, quantity and length may change.

This cross section is intended for preliminary design purposes only.