
BRUSSELS DIMENSIONAL®

WIDE PILLAR

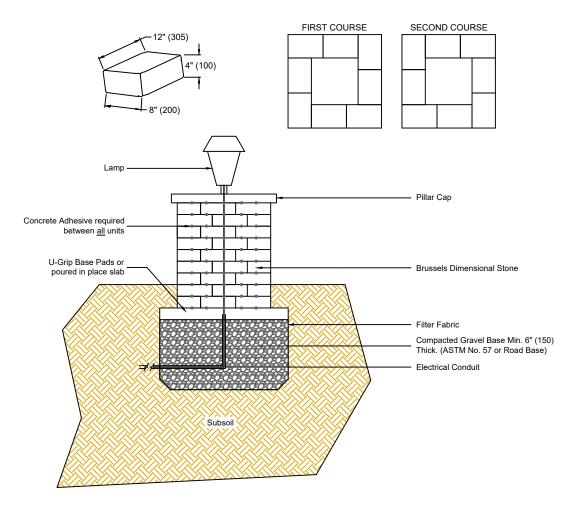

Notes:

- 1. Each course must be glued with concrete adhesive (two 1/4" beads x 10" long/stone).
- 2. Site soil conditions and compaction will impact the ultimate stability of the pillar.

Consult a qualified professional engineer to determine site specific construction details.

Maximum height is typical and will vary from project to project depending on site conditions and load requirements. Geogrid placement, quantity and length may change.

This cross section is intended for preliminary design purposes only.

