
DURA HOLD®

WOOD PRIVACY FENCE INSTALLATION BEHIND GRAVITY WALL (TYPICAL)

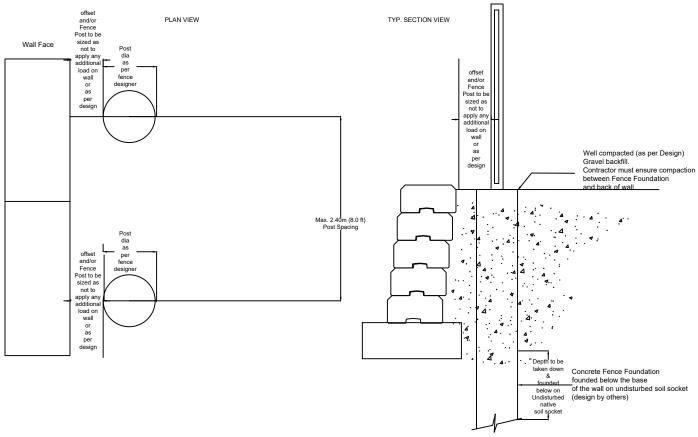

Notes:

- 1. Fence and foundation to be designed by others. Min. foundation depth to be taken below the base of the wall on undisturbed soil socket or as specified in Design.
- 2. Min. 300 offset from back of coping unit.
- 3. Fence footing dia to be designed sufficiently large as not to apply any additional load on Gravity wall.
- 4. Contractor must ensure required compaction around sonotubes, including hand-compaction of area between wall and foundation.



Engineering design by RisiStone Inc.

