
SIENA STONE®

W/FLEXIBLE POST AND BEAM TRAFFIC BARRIER

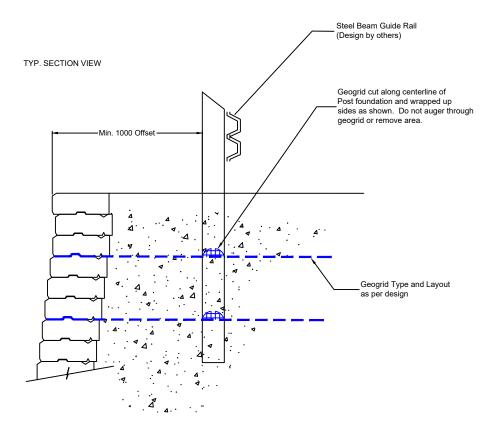

Notes:

- 1. Guiderail post depth to be min. 1.5m (5.0ft) below grade.
- 2. Guiderail posts must be placed as wall is constructed (not auguered through geogrid following construction).
- 3. Contractor must ensure required compaction around posts, including between back of wall and back of post.
- 4. Civil Engineer to review required offsets to ensure they are compatible with site layout.

W/ Flexible Post and Beam Traffic Barrier



Engineering design by RisiStone Inc.

