
REF: Detail_SonomaStone_Concave Curve

SONOMA STONE®

CONCAVE CURVE

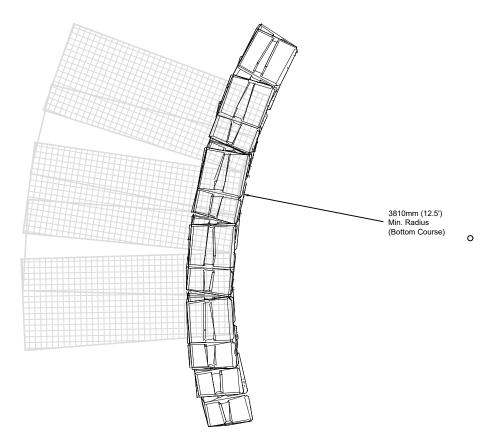

Note:

1. When the gaps between adjacent geogrids exceed 20 degrees, place additional reinforcement on next course of segmental units immediately above the specified placement elevation, in a manner that eliminates gaps left by previous layer of geosynthetic. Repeat for subsequent courses where geogrids is specified to be located

2. Due to curved orientation, gaps will occur between adjacent section of geogrid. Alternate layers should be placed so they overlap the gaps in lower layers.



Engineering design by RisiStone Inc.



UNILOCK.COM | 1-800-UNILOCK