
PISA®/ ROMAN PISA®

SWALE DETAIL (TYPICAL)

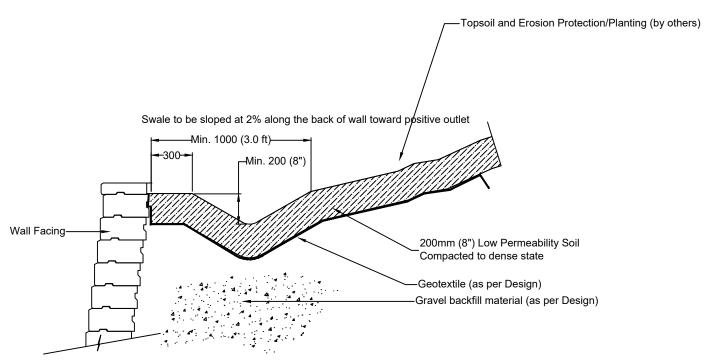

Notes:

- 1. Swale to be dimensioned by Civil Engineer based on site drainage plan.
- 2. Swale to slope at min. 2% along the back of wall toward positive outlet as determined by Civil Engineer.
- 3. Swale must be constructed with low permeability soil (200mm / 8") in thickness to create an effective conduit for water.



Engineering design by RisiStone Inc.

