
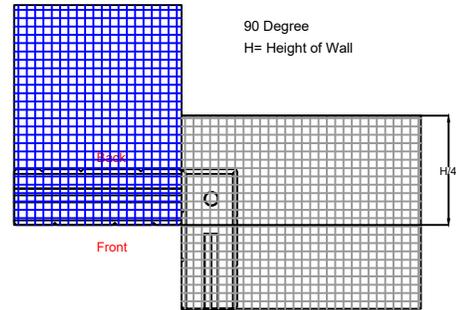




# DURA HOLD<sup>®</sup>

## GEOGRID PLACEMENT AT INSIDE CORNER

REF: Detail\_DuraHold\_Inside Corner with Grid

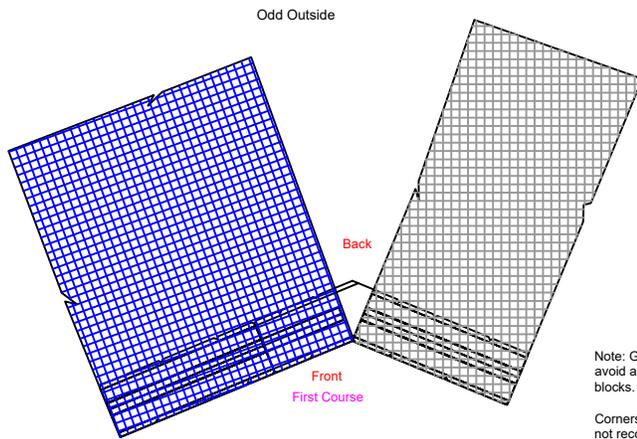

Note: Geogrid should be placed to avoid any overlapping between blocks.  
Corners greater than 90 degree are not recommended

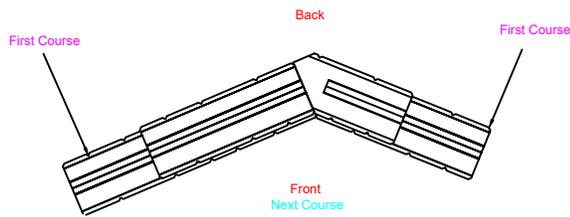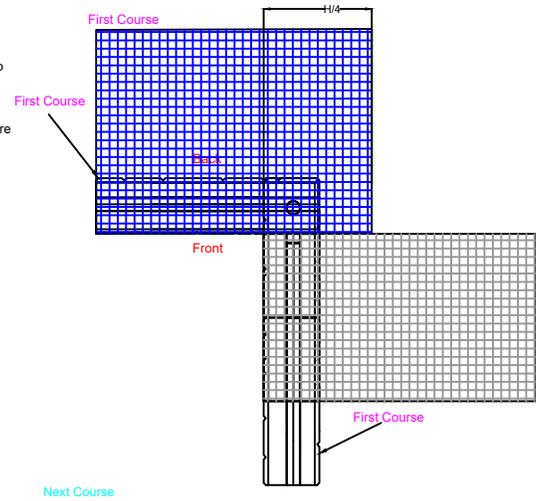

Engineering design by RisiStone Inc.



UNILOCK.COM | 1-800-UNILOCK