



GENERAL SUMMARY OF GRAVITY 500/925 CONSTRUCTION SEQUENCE (3 OF 4)

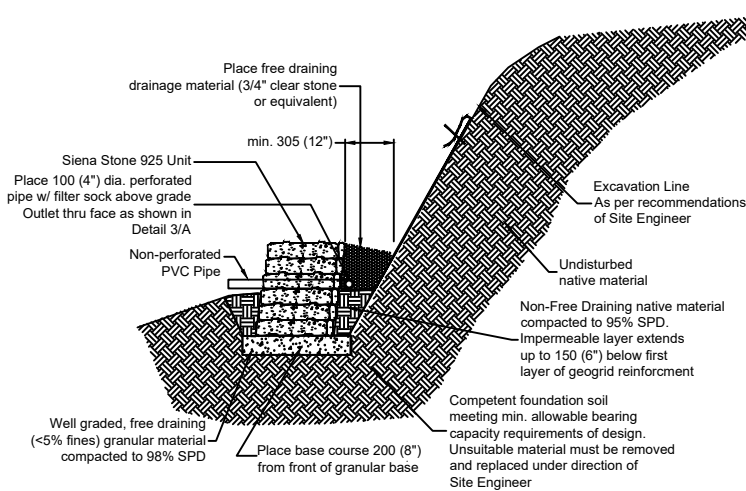

- STEP 3.**
1. Place 1st course above grade, leaving a 100mm (4") gap between courses 15m (50') o/c (see Detail 3/A)
 2. Place perforated drain immediately behind wall face above grade elevation. Outlet thru wall face as shown in detail 3/A w/ T-connection.
 3. Stack additional Siena Stone 925 courses until maximum required number is achieved.
 4. Place clear stone drainage material behind the stacked units and compact as required.

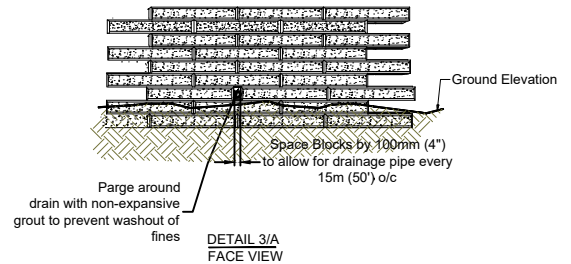

STEP 3 OF 4



Engineering design by RisiStone Inc.

